


Limit – Manual Depth micrometer

Adjust the inner sleeve with the hook wrench until 0,00-value

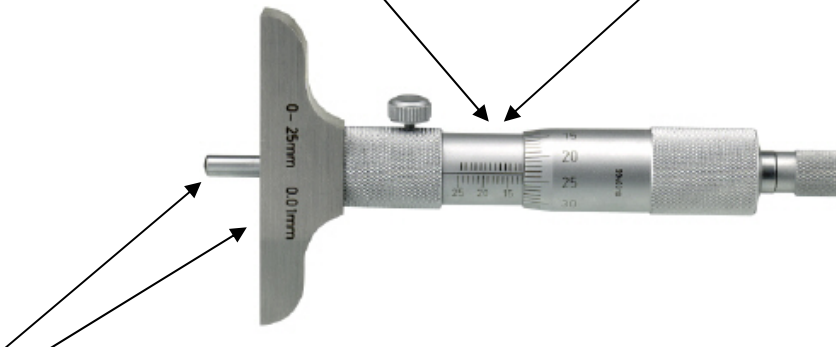

Make measuring tip and base even against a flat surface. For extension rod 25 mm etc, use gaugeblocks between base and measuring tip to set value before adjustment.

LiMiT

www.limit.se